



Model 2801: Professional Multimode 5 Channel CATV VSB/AM Fiber Optic Link

Installation Guide and User Manual

IOM2801PRO
Revision 2.0, March 2007

Warning

The optical emissions from the units are LED-based and present no eye hazards. However it is good practice to avoid using any optical instrument to view the optical output of the unit. As always, be careful when working with optical fibers. Fibers can cause painful injury if they penetrate the skin.

Technical Support

If you encounter any kind of problem after reading this manual, contact your local distributor or an Applications Engineer. To reach technical support:

On the Web:	http://www.forceinc.com • www.emcore.com
By Phone (Monday through Friday 8:00 am to 5:00 pm EST):	USA (800) 732-5252 TEL (540) 961-1945
By Fax:	(540) 961-1900

Information contained herein is deemed to be reliable and accurate as of issue date. EMCORE reserves the right to change the design or specifications of the product at any time without notice. Ortel, the Ortel logo, EMCORE, and the EMCORE logo are trademarks of EMCORE Corporation.

2020 Kraft Drive, Suite 1000, Blacksburg, VA 24060
USA (800) 732-5252 • TEL (540) 961-1945 • FAX (540) 961-1900
www.forceinc.com • www.emcore.com



© Copyright 2007. EMCORE Corporation

Contents

Warning 1	Warranty 14
Technical Support 1	Force Obligations 14
Product Specifications 3	Exclusions 14
Optical and RF Characteristics 3	Product Return Policy 15
Electrical Characteristics 3	Products Returned for Credit - Non Distributor 15
Physical Characteristics 3	Products Returned for Repair or Replacement 15
Environmental Characteristics 3	Active Product Under Warranty 15
Specification Notes 4	Obsolete Product Under Warranty 15
Figure 1 End-to-End Gain vs. Optical Loss 4	Active Out of Warranty 15-16
Figure 2 Bandwidth of a Typical 2801PRO Link 4	Obsolete Product Out of Warranty 16
Figure 3 Optimum Drive Level per Channel vs. Number of Channels Loading 5	Receiving an RMA for Returns 16
Table 1.1 Optimum RF Input Levels and Expected CNR 5	Repair Service 16
Figure 4 2801PRO Link Performance verses Fiber Length at Five Channel Loading 6	Shipping and Handling Precautions 16
Figure 5 Link Performance verses Optical Power 6	Storing the Unit 16
Installation and Operation 8	
General Installation Instructions 8	
Stand-alone Transmitter and Receiver Description 8	
Figure 6 Stand-alone Transmitter Unit Descriptions 8	
Figure 7 Stand-alone Receiver Unit Descriptions 9	
Inspection 9	
Items Provided 9	
Installing the Model 2801T/R PRO Stand-alone Units 9	
Items Required 9	
Physical Module Placement 10	
3RU Rack-mounting Instructions for Stand-alone Units 10	
Items Provided with the 3000 3RU Rack Adapter Card 10	
Mounting Modules on the 3RU Rack Adapter Card 10-11	
Figure 8 Mounting Modules to the 3RU Rack Adapter Card 10	
Figure 9 One Receiver Mounted on a 3RU Rack Adapter Card 10	
Stand-alone Unit Connections 11	
Safety Precautions 11	
Operating Instructions 11-12	
LED Functions 12	
Measuring RF Input Levels 12	
Performance Verification 12	
Troubleshooting 12	
Problems and Comments 13	
Cleaning 13	
Warranty and Return Policy 14	

Product Specifications

Optical and RF Characteristics

All specifications are given at +25°C using multimode 62.5/125 μm fiber, and the optimum RF input level (See Table 1.1).

	Min.	Typ.	Max.	Units	Notes
Tx Optical Output Power	-8.0	-7.0	-6.0	dBm	1
Optical Loss Range	0		9	dB	
Operating Wavelength	1290	1300	1330	nm	
Lower Bandwidth		2	5	MHz	4
Upper Bandwidth	350	400		MHz	4
Impedance		75		Ohms	
Carrier-to-Noise Ratio	See Figure 5.				6
End-to-End Link Gain	See Figure 1.				2

Electrical Characteristics

	Min.	Typ.	Max.	Units	Notes
Power Supply Voltage	+9		+11	Volts DC	5
Tx Current Draw		250	270	mA	
Rx Current Draw		100	110	mA	

Physical Characteristics

	Min.	Typ.	Max.	Units	Notes
Weight (Stand-alone Tx or Rx)		6.0		oz.	
		170		g	
Dimensions (Stand-alone Tx or Rx)	3.75 x 2.95 x 1.12			in.	
	95.25 x 74.93 x 28.45			mm	

Environmental Characteristics

	Min.	Typ.	Max.	Units	Notes
Operating Temperature	+10		+45	°C	
Storage Temperature	-20		+70	°C	
Humidity	10		95	%	7

Specification Notes

- 1) All optical power levels are average values. Transmitter output power levels are measured with a three meter jumper cable.
- 2) Figure 1 illustrates the end-to-end gain versus optical loss for the 2801T PRO/2801R PRO combination. The main factor that determines the end-to-end gain is the amount of light that reaches the receiver. The RF gain changes by 2 dB for every 1 dB change in received optical power. This curve will shift up and down by 3 or 4 dB due to variations in the LED's, detectors and amplifiers, however the slope will always be 2:1.

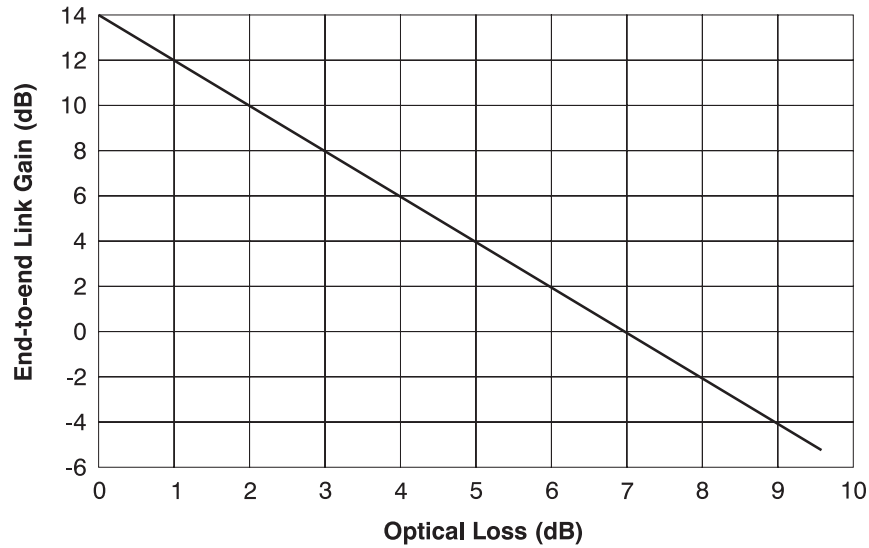


Figure 1 End-to-End Gain vs. Optical Loss

- 3) The Model 2801 PRO receiver contains a built-in indicator of optical input level. This is displayed using a multicolored LED. If the optical input level is too high (nominally -6 dBm), the LED will be red. If the optical input falls between -6 dBm and -16 dBm, then the LED will be green. When the input light level falls below -16 dBm, the LED will turn yellow. Because the indicator is always lit, it also serves as a power indicator.
- 4) The Model 2801 PRO offers exceptionally wide bandwidth with a minimum of ripple. The unit offers excellent performance from 5 MHz to about 400 MHz. Figure 2 shows the bandwidth of a typical link.

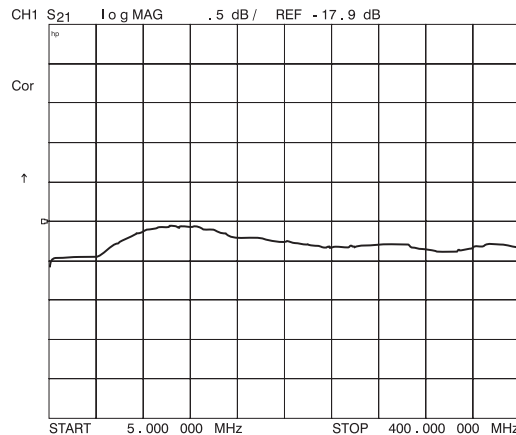


Figure 2 Bandwidth of a Typical 2801 PRO Link

The vertical scale is 0.5 dB per division. The passband flatness variation is +/- 1.0 dB maximum. The TV channels transmitted through the 2801 PRO must fall within a single octave range of frequency, i.e., a 2-to-1 range of frequency. For instance, if the lowest frequency being used is 50 MHz, then no channel may be at 100 MHz or higher. See Application Note AN123 for a list of television frequency used in North America.

- 5) The 2801 PRO transmitter and receiver use the same type power supply. Supply voltage should be between +9 Volts and +11 Volts DC. In no case should the supply voltage exceed +11 Volts DC. The units will tolerate small amounts of ripple, but this should not exceed 0.5 Volts peak-to-peak. It is critical that the supply voltage never drops below +9 Volts for any part of the waveform. Voltages below +9 Volts will cause the internal voltage regulators to lose regulation which will disrupt the operation of the unit and cause unpredictable results. It is recommended to use the Model PS090 for both units.
- 6) All specifications shown are met when the RF input levels complies with the values shown in Table 1.1. A smaller RF input level will cause reduced carrier-to-noise ratio which may produce a snowy picture. A larger RF input level will cause increased distortion between channels which may produce irritating interference bars or patterns in the picture. Table 1.1 shows the optimum (maximum without distortion) RF input level in four different units: dBm, mV_{RMS} , $mV_{P.P}$ and dBmV. Table 1.1 also shows the typical CNR that can be achieved with the link at 0 dBm optical loss. The CNR is specified for a bandwidth of 4.0 MHz. At 1300 nm, the loss is typically only 0.5 dB/km, so the listed level of performance could be expected at distances shorter than 0.5 km. As the optical loss increases, the CNR will degrade as indicated in Figure 5. Note that it is important that all channel amplitudes be closely matched for the best performance. Figure 3 shows the same information graphically.

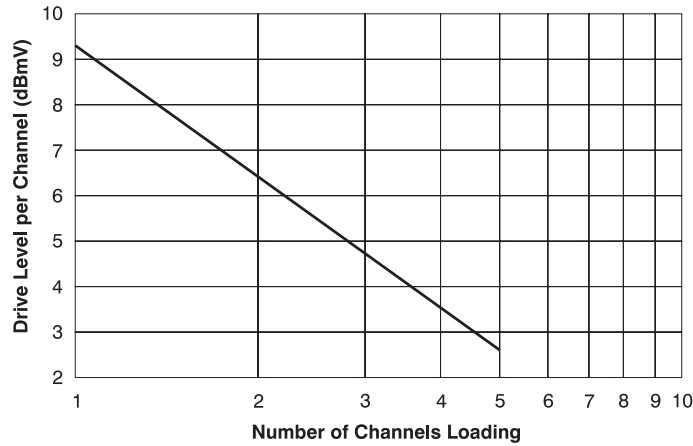


Figure 3 Optimum Drive Level per Channel vs. Number of Channels Loading

Table 1.1 – Optimum RF Input Levels and Expected CNR

Number Of Channels	Level Per Carrier (dBm)	Level Per Carrier (mV_{RMS})	Level Per Carrier ($mV_{P.P}$)	Level Per Carrier (dBmV)	CNR in 4.0 MHz BW @ 0 dB Loss (dB)
1	-39.4	2.93	8.3	9.4	52.4
3	-44.0	1.73	4.9	4.8	49.0
5	-46.2	1.34	3.8	2.6	47.0

Figure 4 shows the CNR (carrier-to-noise) performance of the 2801 PRO link with a 3-channel load using varying lengths of optical fiber. This data was taken with very few intermediate connections.

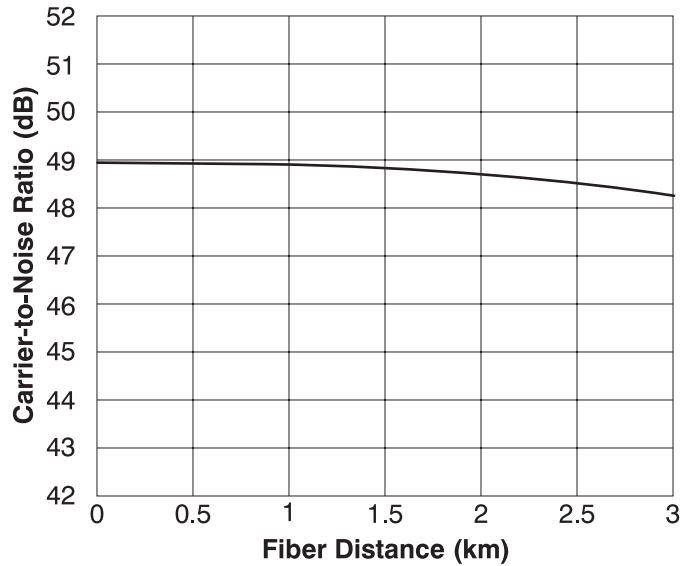


Figure 4 2801 PRO Link Performance verses Fiber Length at Five Channel Loading

Figure 5 illustrates the carrier-to-noise ratio (CNR) performance of the 2801 PRO link verses received optical power.

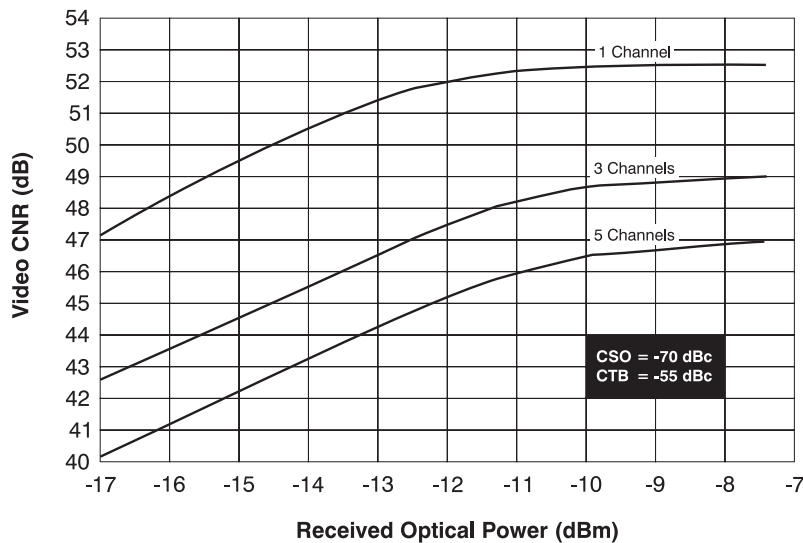


Figure 5 Link Performance verses Optical Power

- 7) Humidity is RH non-condensing.
- 8) Be sure to compute fiber bandwidth (end-to-end) as well as fiber attenuation. Bandwidth often gets overlooked by system designers who incorrectly assume that fiber has essentially infinite bandwidth.
- 9) The Model 2801 PRO transmitter contains a built-in precision RF level meter that allows the optimum RF input level to be quickly and precisely determined. The output of the circuit is a multicolored LED. When the LED is yellow, the RF input level is too low and the picture is likely to be grainy. When the LED is green, the RF input level falls within the optimum band yielding the best picture. The “green” band is typically about 3 dB wide. When the LED is red, the RF input is too high and the picture is likely to be distorted and show interference. Because the indicator is always lit, the LED also serves as a power indicator. This RF input indicator works for any channel loading from one to five channels as long as the frequency of all channels is less than 400 MHz.


- 10) When using the link with a typical CATV feed, such as those found in most homes, a filter must be inserted prior to input of the 2801 PRO transmitter so that only the appropriate channels reach the 2801 PRO input. For instance, if CATV channels 2-6 are transmitted, then a 50 MHz high-pass filter followed by a 100 MHz low-pass filter is required. Mini-Circuits (Brooklyn, NY) offers two models; the BHP-50-75 and the BLP-100-75 are well-suited for this application.
- 11) The bottom of the unit serves as a heat sink. It is imperative that good thermal contact be provided between the bottom of the unit and an external heat sink. Silicone grease or pads is recommended to improve thermal conductivity.

Installation and Operation

General Installation Instructions


The installation of these units is very simple. There are no special unpacking instructions, except that care should be taken to handle units gently. Like most electronics, they are susceptible to ESD. Proper ESD techniques, such as wearing a wrist grounding strap, should be observed at all times when handling a unit. The units should not be dropped. The unit requires no assembly and no adjustments.

Stand-alone Transmitter and Receiver Description

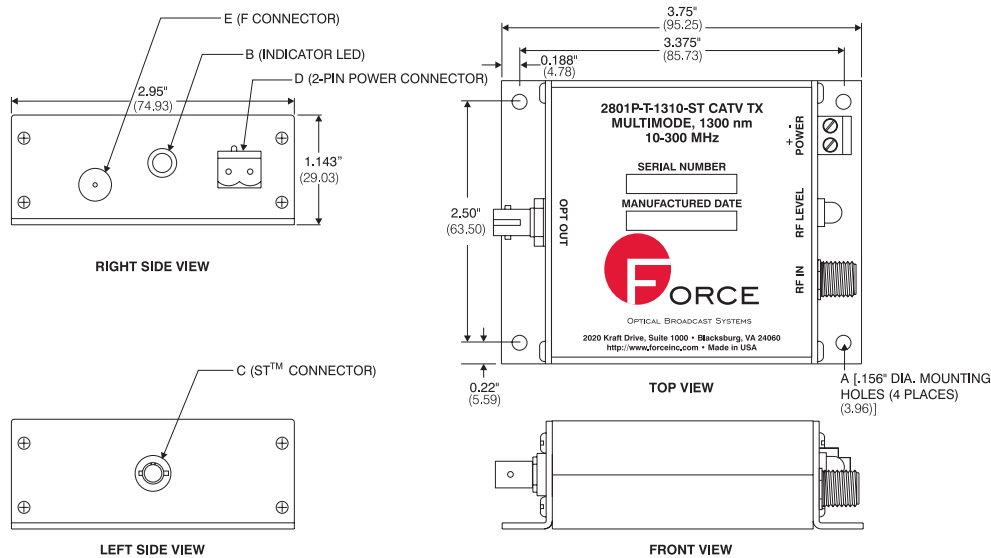

- A. Mounting Holes (4 Places): Sized for 4-40 or 6-32 diameter screws. Used to mount the stand-alone modules.
- B. Indicator LED (Green/Yellow/Red LED): On the transmitter, this gives an indication of RF level. See page 12 for LED functions.
- C. Transmitter Optical Output (ST): Optical output from the transmitter.
- D. Transmitter Power Connector (2-Pin Weidmuller): Used to connect the transmitter to the PS090 power supply.
- E. Transmitter RF Input (F Connector): Input for the RF signal.

Figure 6 Stand-alone Transmitter Unit Descriptions
(Dimensions in parentheses are in millimeters.)

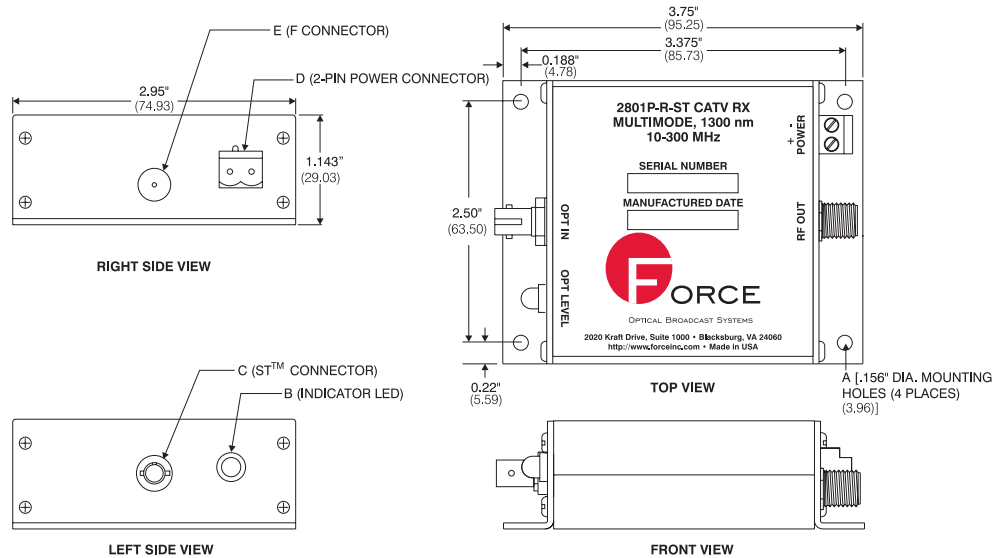

- A. Mounting Holes (4 Places): Sized for 4-40 or 6-32 diameter screws. Used to mount the stand-alone modules.
- B. Indicator LED (Green/Yellow/Red LED): On the receiver this gives an indication of optical level. See page 12 for LED functions.
- C. Receiver Optical Input (ST): Optical input to the receiver.
- D. Receiver Power Connector (2-Pin Weidmuller): Used to connect the receiver to the PS090 power supply.
- E. Receiver RF Output (F Connector): RF output from the receiver.

Figure 7 Stand-alone Receiver Unit Descriptions
(Dimensions in parentheses are in millimeters.)

Inspection

Remove the unit from its shipping container. Any in-shipment damage that may have occurred should be visually apparent. Look for bent or damaged connectors or mounting brackets. Claims for damage incurred in shipment should be made directly to the transportation company in accordance with their instructions. Save the shipping cartons until installation and performance verification are completed.

Items Provided

The following is a list of items provided with each Model 2801PRO:

Qty.	Mfr.	P/N	Description
AR	Force, Inc.	2801P-T-1310-ST	5 Channel CATV VSB/AM Video Transmitter
AR	Force, Inc.	2801P-R-ST	5 Channel CATV VSB/AM Video Receiver
1 per connector	Any	Any	Active Device Receptacle Caps

Installing the Model 2801T/R PRO Stand-alone Units

Items Required

Qty.	Mfr.	P/N	Description
4 per unit	Any	Any	4-40 or 6-32 Panhead Mounting Screws with Lock Washers and Nuts
1	Any	Any	Straight Screwdriver
1 per Tx	Force, Inc.	PS090-1	+9 Volt, 300 mA DC Power Supply, 2-pin Weidmuller Plug (Powers the transmitter.)
1 per Rx	Force, Inc.	PS090-1	+9 Volt, 300 mA DC Power Supply, 2-pin Weidmuller Plug (Powers the receiver.)
AR	Any	Any	Multimode 62.5/125 μm Graded-Index Fiber

Physical Module Placement

Units may be mounted in any orientation on most flat, dry surfaces. Secure panhead screws through mounting holes provided at the base of the module. If the unit is placed in a location where temperatures may exceed 38°C (100°F), a good heat sink should be secured. The use of silicone thermal pads is recommended between the module and the plate to maximize heat transfer.

3RU Rack-mounting Instructions for Stand-alone Units

One 2801 PRO unit may be rack-mounted using the Model 3000 rack adapter card. This allows the units to be installed in the Model 3000 3RU 19" Rack Chassis for use in a standard 19" wide rack. The 3000 rack adapter card holds one unit, and the chassis accommodates ten cards, allowing up to ten modules to be used in a single 3RU rack chassis.

Items Provided with the 3000 3RU Rack Adapter Card

The following is a list of items provided with each 3000A-NN-1 rack adapter card.

Description	Part Number	Qty. 3000A-NN-1
3RU Rack Adapter Card PCB Assembly	3000.201	1
Phillips Panhead Screw, 4-40 x 3/8"	9410-0169	4
Washer, #4 Lock, Internal Tooth	9430-0067	4
Nut, 4-40, SS	9430-0109	4
2-Pin to 4-Pin Power Rack Adapter Cable	3000.501	1

Mounting Modules on the 3RU Rack Adapter Card

- 1) Locate the supplied rack adapter card parts for the model purchased as indicated above.
- 2) Figure 8 shows the general directions for installing all mountable modules to the rack adapter card.

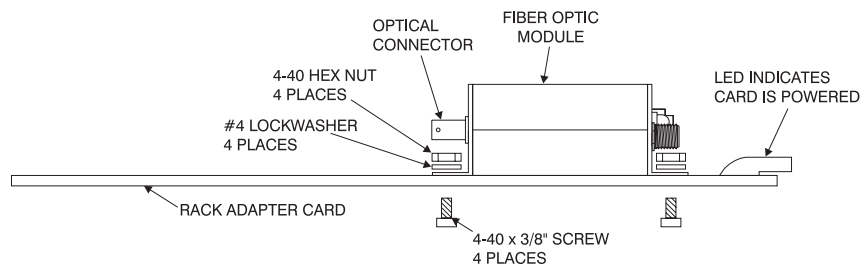
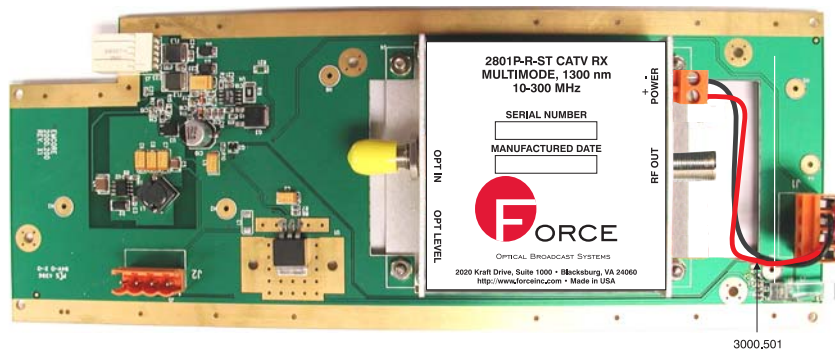


Figure 8 Mounting Modules to the 3RU Rack Adapter Card

- 3) Assemble the power rack adapter cable. This is done by attaching the 2-pin cable assembly (3000.501) to the power connector on the unit and the 4-pin to be mounted on the rack adapter card at J1.
- 4) The rack adapter card is now ready to install in the rack chassis. (See IOM3000C for complete details on using the 3000 chassis.) Figure 9 illustrates a receiver module correctly mounted on the 3000 rack adapter card.



**Figure 9 One Receiver Mounted on a 3RU Rack Adapter Card
(Transmitter configuration is identical)**

Stand-alone Unit Connections

Tx Connector Number	Tx Connector Type	Tx Connector Function	
D1	ST™	Optical Output	
J1	Weidmuller 12591.6, 2-Pin (Mating adapter provided.)	Pin	Function
		J1-1	+9 Volts
		J1-2	Ground
J2	F type	RF Analog Input	
Rx Connector Number	Rx Connector Type	Rx Connector Function	
D2	ST™	Optical Input	
J2	Weidmuller 12591.6, 2-Pin (Mating adapter provided.)	Pin	Function
		J2-1	+9 Volts
		J2-2	Ground
J1	F type	RF Analog Output	

Safety Precautions

The Model 2801 PRO VSB/AM Fiber Optic Video Link, when properly applied, presents no hazards. One recommended precaution is that attention be paid to applying the proper supply voltage. The recommended voltage of +9 Volts DC for the transmitter and receiver is considered harmless. Power reversal or incorrect voltages may cause damage or injury. The optical emission from the units are LED-based and may present no eye hazards. As always, be careful when working with optical fibers. NEVER USE ANY KIND OF OPTICAL INSTRUMENT TO VIEW THE OPTICAL OUTPUT OF THE UNIT.

Operating Instructions

It is very important to provide the proper RF signal level to the 2801 PRO transmitter. Exceeding the RF input level may destroy the transmitter. The transmitter includes a built-in RF level indicator that allows the optimum RF input level to be quickly and positively identified. A single multicolored LED is used to indicate the RF input level. If the LED is yellow, the input level is too low. If it is green, the input level falls within the optimum range. When the RF input level is too high, the LED will be red. The level LED also provides a positive indication of unit power. Ideally, the RF power level will be centered within the green range. A state-of-the-art 1310 nm LED and PIN detector are used to achieve the performance levels cited. This product is recommended for use with 62.5/125 μm fibers only. A minimum fiber bandwidth of 400 MHz is required. Follow the steps below to begin operating the link.

1. Install the links as described in this document.
2. Measure the RF level BEFORE making any connections to the transmitter. This measurement is described on page 12.
3. Clean the optical connectors. See page 13 for cleaning instructions.
4. Connect the optical fiber to the transmitter and the receiver. Be sure that the fiber has continuity and less than the maximum allowable optical loss. Also be certain that the fiber is the proper size. It is recommended that this product only be used with multimode 62.5/125 μm fiber.
5. Connect the RF source (VCR, camcorder, cable television, etc.) to the RF analog input on the transmitter. See Figure 3, page 5, Note 6 for RF input level requirements. The RF input level requirements vary depending on the number of channels.
6. Connect the RF analog output on the receiver to the monitor input. The monitor input should present a 75 Ohm impedance. Figure 1, page 4 gives an indication of link gain from which the signal level presented to the monitor can be determined.
7. Connect power supplies to the transmitter and receiver. The power supply must be from +9 to +11 Volts DC. It is critical that the supply voltage never drops below +9 Volts. If the voltage drops below +9 Volts, the link may not operate.
8. Apply power. The units are now fully operational. No user adjustment or attention is required.

LED Functions

LED Name	Green	Yellow	Red
Tx RF Level	Transmitter is receiving the optimum RF input level.	RF input level is too low.	RF input level is too high.
Rx Optical Level	Receiver has the optimum optical input.	Optical input level is too low.	Optical input level is too high.

NOTE

If too much RF is reaching the transmitter input, and the LED has turned red, reduce the incoming RF level immediately using attenuators to avoid damaging the LED.

Measuring RF Input Levels

Excessive RF input to a fiber optic CATV transmitter **WILL** kill the laser even if the unit is not powered. Even in LED-based transmitters such as the 2801T excessive RF on the input may destroy the device. Therefore it is imperative that the RF level be within acceptable limits **BEFORE** the cable is attached to the transmitter. (Note that the LED can be destroyed by excessive RF even if the transmitter is NOT powered.)

Ideally, the RF level should be checked with an instrument such as a spectrum analyzer to verify that the levels are appropriate. See Figure 3, page 5, Note 6 for the optimum drive levels. If instrumentation is not available to actually measure the RF levels, it is recommended to add 40 dB of attenuation at the transmitter input; 40 dB of attenuation will adequately protect the unit from the highest RF levels that might be seen in a typical CATV installation. Do not attach the RF cable at this time, just verify the RF levels and/or add the appropriate attenuators at the transmitter input.

Performance Verification

Once steps 1-8 (See Operating Instructions, page 11) have been successfully completed, verify that the picture quality is good. If the picture quality is not good, there are several likely causes:

1. The optical fiber may have large backreflections. Use an OTDR to examine the fiber run.
2. The RF input spectrum may not be flat. It is possible to have a green RF Level LED even if the input spectrum has a large amount of tilt. All Emcore CATV products are designed to operate with a flat input spectrum.
3. There may extraneous (i.e. non-video) signals in the input RF. Be sure to filter out all non-desirable signals.
4. The optical input power at the receiver may be too low. Assuming that the receiver shows a green light, the optical input level may be too low. See Figure 3, page 5, Note 6 for the expected CNR versus the channel loading and received optical power.
5. If all of these steps have been tried and the problem remains, consult additional troubleshooting information in next Section, or call an applications engineer.

Troubleshooting

Common problems include using a transmitter as a receiver and vice versa, lack of continuity in the fiber, lack of power (or reversed power), or improper input levels. The transmitter is optimized to accept an input level as described in Figure 3, page 5. Larger inputs will introduce nonlinearities or interfere with function, and smaller inputs will degrade the carrier-to-noise ratio. If problems persist contact the factory.

Problems and Comments

Problem	Check	Comments
No optical power out of Tx.	Check Tx power connection.	If there are less than +9 Volts between pins J1-1 and J1-2, a higher current power supply is required (at least 250 mA). If the voltage on pin J1-1 is negative with respect to the voltage on pin J1-2, reverse the power supply leads.
No optical power at the Rx.	Check power at the Tx.	If there is power at the Tx, verify proper fiber is connected to the Rx. If the proper fiber is connected, ensure the integrity of the fiber.
Signal out of Rx is noisy.	Check optical power at the Rx.	See Figure 3, page 5, Note 6 for the input signal levels required to operate the units. Be sure to ground the case of the Tx and Rx.
No signal out of Rx.	Verify the input signal at the Tx.	See Figure 3, page 5, Note 6 for the required input signal level.
	Check the Rx power connection.	If there are less than +9 Volts between pins J2-1 and J2-2, a higher current power supply is required (at least 100 mA). If the voltage on pin J2-1 is negative with respect to the voltage on pin J2-2, reverse the power supply leads.
Signal amplitude out of Rx too large.	Verify that the Rx output is terminated into 75 Ohms.	Add 75 Ohms terminating resistor. Verify that the Tx input is within the specs given in Figure 3, page 5, Note 6.
Signal out of Rx is distorted.	Verify input signal at Tx.	The Tx input must be within the specs given in Figure 3, page 5, Note 6. A larger signal will cause distortion.
	Verify fiber size.	Fiber must be 62.5/125 μm . Verify that the Rx power is within specifications.

Cleaning

If the link needs to be cleaned, avoid the use of all solvents and use low-pressure clean air to remove loose dirt. Use low-pressure clean air to clear the connectors of any debris. Dirty or scratched connector end faces will greatly reduce the unit's performance. Do not try to use fluids or high-pressure air to clean out the optical ports. Foam-tipped swabs such as the 2.5 mm Mini Foam Swab offered by Fiber Instrument Sales (P/N F1-0005) may be saturated with denatured alcohol* and inserted into the optical port for cleaning. **DO NOT INSERT A DRY SWAB INTO THE OPTICAL PORT AS THIS MAY DAMAGE THE FIBER END FACE.** Many fiber optic installations experience degraded performance due to dirty optical connector end faces. Download <http://www.forceinc.com/techbull/optical-connector-cleaning.pdf> for complete instructions.

Warranty and Return Policy

Warranty

Force, Incorporated standard products are warranted to be free from defects in materials and workmanship, meeting or exceeding factory specified performance standards for a period of three (3) years from date of purchase.

Force Obligations

Force will, at its discretion and expense, repair any defect in materials or workmanship or replace the product with a new product. Force will, upon receipt of the return, evaluate the product and communicate to the customer the nature of the problem, and determine if the claim falls under warranty coverage.

If during the warranty period, Force is unable to repair the product to the original warranted state within a reasonable time, or if subcomponents of the unit have been obsoleted or discontinued, then Force has the option to provide an equivalent unit.

Exclusions

This warranty does not extend to any product that has been damaged due to acts of God, accident, misuse, abuse, neglect, improper system design or application, improper installation, improper operation or maintenance, or connection to an improper voltage supply.

The Force warranty does not cover fuses, batteries, and lamps. Modifications or alterations of Force products (including but not limited to installation of non-Force equipment or computer programs), except as authorized by Force, will void this warranty. Removal or breaking of the seals on the product will also void the warranty. In addition, cost of repair by unauthorized persons within the warranty period of the product will not be covered by Force, Incorporated. Such repairs will void the warranty.

Force, Incorporated makes no other representation or warranty of any other kind, express or implied, with respect to the goods, whether as to merchantability, fitness for a particular purpose, or any other matter. Force, Incorporated's liability shall not include liability for any special, indirect or consequential damages, or for any damages arising from or attributable to loss of use, loss of data, loss of goodwill, or loss of anticipated or actual revenue or profit, or failure to realize expected savings, even if Force, Incorporated has been advised of the possibility of such damages. This warranty constitutes Force, Incorporated's entire liability and the customer's sole remedy for defects in material and workmanship.

Product Return Policy

Customers will be permitted to return products for credit, repair, or replacement only after receiving authorization from the Customer Service Manager (CSM) and only with a valid Return Material Authorization (RMA) number. The criteria determining whether a product is covered under this policy are described below and RMA numbers will be issued only under these guidelines. For Return Requests that do not comply with the following criteria, the CSM must have approval from the VP Operations, or designee prior to issuing an RMA number.

Products Returned for Credit - Non Distributor

Customers will be allowed to return product for credit only under the following conditions:

- Products are current standard Force products as per the price list.
- Products are in new, unused, and undamaged condition and are in the original packaging.
- Products were originally shipped to the customer requesting Return Authorization.
- Request for return is for a valid reason as determined by Force, Inc.
- Products were shipped to the customer less than 3 months prior to return request.
- Customer receives proper Return Material Authorization prior to returning the product.
- Customer pays return freight and insurance if requested by Force, Inc.

Customers will be issued a credit for the original selling price of the product less a 20% restocking charge after verification that the product meets the criteria as stated above. Payment to customers with no outstanding balance will be made 30 days after requested by customer.

Products Returned for Repair or Replacement

Force's response to a customer product return request will be based upon whether or not the product is still part of Force's standard product offering and whether or not the product is still under warranty. A product will be considered active if it is currently part of Force's standard product offering. Active products are denoted in Force's current price list. Obsolete products are not considered active. A product is considered under warranty in accordance with "Force, Inc. Product Warranty"

Prior to receiving an RMA number, the customer will be asked to discuss the reason for the return with Technical Support to try to resolve the problem. This discussion will be documented to aid with troubleshooting and repair of the product. Any detail the customer can provide will expedite the process once the product is received.

The criteria denoted above will cause any incoming returns to fall into one of the following categories:

- A. The product is currently active and is under warranty.
- B. The product is currently obsolete, but is still under warranty.
- C. The product is active, but out of warranty.
- D. The product is obsolete and out of warranty.

Active Product Under Warranty

Force will honor the warranty for these products. As a result, product(s) should be accepted upon return for rework or repair in accordance with Force's warranty policy.

Obsolete Product Under Warranty

Force will honor the warranty for these products. As a result, product(s) should be accepted upon return for rework or repair in accordance with Force's warranty policy.

Active Out of Warranty

Force will accept return of product under this category as long as the sale of the product occurred less than five (5) years prior to the return request. The product serial number should aid in determining the age in cases where information is not in the data base. Rework or repair will be in accordance with Force's warranty policy and will include an evaluation charge, which will be quoted to the customer prior to the return of the product.

The evaluation charge is 20% of the current list price of the product or a minimum of \$250 whichever is greater. The customer will either need to provide a purchase order number (with approved credit) or a credit card number before receiving an RMA number. Force cannot guarantee its ability to repair or rework the product. If costs to repair the product exceed the evaluation charge, the customer will be notified of such charges and instruction to proceed with repairs will be indicated either by a P.O. number or credit card authorization.

Obsolete Product Out of Warranty

Force is not obligated to accept requests for product under this category. The CSM, with prior approval from Operations will be responsible for approving return requests for products falling under this category.

Receiving an RMA for Returns

Customers requesting RMA numbers for any reason will be instructed as to how and where to ship the products being returned, and will be directed to show the RMA number on all external packaging and documentation. The CSM is responsible for providing any necessary instructions to the customer to ensure proper handling of the returned material. Upon receipt of the product, all Force personnel are to process the return as per SP002, "Handling of Customer Returns". Contact the factory at USA (800) 732-5252 or TEL (540) 961-1945 to request an RMA.

Repair Service

For equipment repair or technical assistance, contact Customer Service (800) 732-5252 (USA) or (540) 961-1945. A Returned Material Authorization (RMA) number must be issued by Customer Service before the return of a failed unit. Units should be returned in their original shipping carton, if available. Always include a complete description of the failure or observed anomalies. All units are marked with model number and serial number. This identification information is located on the product label. The serial number is a date code used as a reference for warranty service.

Shipping and Handling Precautions

The units are, in general, very rugged and can withstand the stresses of most shipping and handling circumstances. However, the following precautions should be taken:

- 1) When the units are shipped they should be wrapped in a protective material, such as bubble wrap, to protect against excessive jarring and to prevent damage to the external finish of the units. Always use packing material to separate multiple units that are packaged together.
- 2) Care should be taken not to drop or strike the units in any way, especially around the optical connectors.
- 3) The units should never be submersed in any liquid. **SEVERE SHOCK HAZARD!**

Storing the Unit

If a unit is to be out of use for an extended period of time, the following steps should be taken to ensure the preservation of the unit:

- 1) The storage temperature range is -20°C to +70°C.
- 2) A low humidity environment is preferable for long term storage.
- 3) All connectors should be covered with active device receptacle caps.